




The procedure retrieves unit Identification Number.

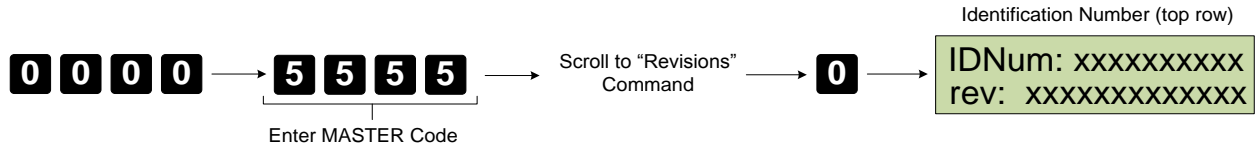

1. Enter MASTER code to display MASTER menu
2. Scroll to "Revisions" Command and press key [0] (Execute Command)
3. The 10-digit Identification Number is displayed on the top row of the LCD