




The procedure retrieves unit Identification Number.

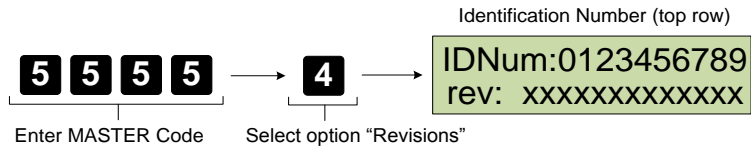

1. Enter four digit MASTER code to display MASTER menu
2. Press key [4] to display "Revisions"
3. The 10-digit Identification Number is displayed on the top row of the LCD